

M3-LS-U2-8 Linear Smart Stage

All-In-One Motion Module

- Smart Stage: Embedded controller, no separate electronics
 Operate directly using I²C or SPI ASCII commands -or-
 - Evaluate with Pathway™ PC Software and USB adapter
- Cost-effective, long-life: For high-volume production
- Small size: 32 x 32 x 10 mm
- High resolution: 0.5 µm with absolute encoding
- High speed: 35 mm/s
- Long stroke: 8 mm
- Power: 5 V DC input, ~ 3.2 W peak when moving
- High repeatability (± 2 µm typical)

Precision, stability and ease of use for high volume product applications

The M3-LS-U2 Linear Smart Stage is a direct-drive, highprecision micro stage built for fast, simple integration into miniature OEM systems. All drive and control functions are embedded into the compact stage assembly – **no external electronics** are needed!

The stage drive is a UTAF2 piezo motor combined with a 0.5 μ m resolution sensor for precise, repeatable positioning of optics, probes, sensors and more. The piezo motor operates at 5 VDC. No high voltage boost is needed. **Absolute encoding** removes the need to home the stage on power-up, eliminating errors and disruptions in processes and experiments.

At 35 mm/sec it is 7x faster than other M3 Smart Stages.

The anodized aluminum stage uses linear ball bearing races with very low uniform friction. The bearings directly support the motor preload which creates a stable, precise and zero clearance guide system. The base is the maximum footprint required for installation in your product because the carriage moves within the total length of the base.

This smart stage is designed for long life and is ideal for embedding precision motion into high-volume products.

Digital Control and Pathway[™] Software

The M3-LS-U2-8 Smart Stage can be driven directly via standard I²C or SPI serial protocols. The smart stage microprocessor accepts ASCII high-level motion instructions.

New Scale Pathway[™] software and USB adapter enable PC control. Access all stage capabilities including settings, motion commands, performance diagnostics, and parameters stored in non-volatile memory. Use the intuitive script generator to create command sequences for automated operation.

Your BeNeLux Distributor





The M3-LS-U2-8 Linear Smart Stage is an ultra-compact positioning stage with submicrometer resolution and absolute encoding. *All electronics are built into the stage* for simple system integration. This model features power-off hold, high speed, and is cost-effective for high volume manufacturing.

APPLICATIONS

- DNA sequencing instruments
- Point-of-care diagnostic systems
- Portable spectroscopy instruments
- Biomedical probing & sampling
- Laser beam steering
- Miniature camera systems
- And much more


| Setup connection | Connect | Disconn | ect A | bout | | Scale nologies |
|---------------------------------|-------------------|---|-------------|-----------------|---------------|------------------------|
| otor Control NS | E-5310 Script Con | trol Displ | lay Only Ax | is Attributes | Options | |
| Motor | Position | Error | Enc Res | Status | At Limit | Motor Freq. |
| | 7500.0 | -0.5 | 500.00 nm | Idle CL | No | Calibrated |
| 2 | 2999.5 | 0.5 | 500.00 nm | OnTarget | No | Period Offset: 5 |
| | | | | | | Calibrate Frequency |
| Closed Loop Posit | ion Closed Lo | oop Analog | Servo | Closed Loop Spe | eed | |
| Enable CL: 🔽 | Enc F | Ref Z | Zero | Run Speed: | 4000 µm/se | c |
| Target (µm): 0 | Taro | et H | lome | Cutoff Speed: | 50 µm/se | C Apply |
| Enc Step (µm): 10 | Step F | | sp Fwd | Acceleration: | 49804.5 µm/se | |
| Manual Command I | Entry | | | Jog Control | Mc | tor Step Control |
| | - | | | Rev | Ewd I | Mtr Steps: 1 |
| Send <11 0E0 7 | 7530000000000000> | | | | | Interval: 10.00 |
| Sent | Received: | | | Run Control | | |
| <90 0002 0002 1> | <90 02E2 | > | <u>^</u> | Rev | Fwd | Duration: 1.00 |
| <12 0E0 08> | | 000000000000000000000000000000000000000 | 00> | Stop | | Rev Fwd |
| <11 0E0 75300000 <12 0E0 08> | <12.7520 | 000000000000000000000000000000000000000 | 00> | | | |
| | > < | | > 2 | Max Speed: | | 10 |
| < | | | | | | |

New Scale Pathway[™] Software with easy-to-use graphical interface enables PC control for evaluation and system development. Control multiple smart stages from one PC screen, or develop your own code using the intuitive scripting tool.


M3-LS-U2-8 Linear Smart Stage

Specifications


| M3-LS-U2-8 Linear Smart Stage Specifications | | | | |
|--|--|--|--|--|
| MODEL | M3-LS-U2-8 | | | |
| Stroke | 8 mm | | | |
| Dimensions | 32 x 32 x 10 mm including controller | | | |
| Mass of Smart Stage (Note 1) | 15 grams including controller | | | |
| Payload mass (vertical) (Notes 2, 3) | ≤ 5 grams recommended | | | |
| Payload mass (Sideways and horizontal) (Notes 2, 3) | ≤ 20 grams recommended | | | |
| Holding Force | ≥ 0.3 N | | | |
| Force (bidirectional) | ≥ 0.1 N | | | |
| Speed | 35 mm/sec | | | |
| Duty cycle (Note 4) | 50% max recommended | | | |
| Closed-loop performance | | | | |
| Resolution | 0.5 μ m with absolute encoding | | | |
| Bi-directional repeatability | ±5μm | | | |
| Accuracy | ± 10 μm | | | |
| Input Quiescent Power | ~ 0.35 W | | | |
| Input Power (peak) | ~ 3.2 W | | | |
| Input Voltage | 5 V DC (4.75 V to 5.5 V) | | | |
| Mechanical stage | | | | |
| Static parallelism | < 30 μm | | | |
| Runout | < 10 μm | | | |
| Pitch, yaw, and roll | < 1 mrad | | | |
| Absolute maximum loads | See chart on page 3 | | | |
| Environment | | | | |
| Relative humidity | < 70% | | | |
| Operating temperature (Note 5) | -30 °C to +70 °C | | | |
| Storage temperature | -40 °C to +80 °C | | | |
| Lifetime (Note 6) | 50 km | | | |
| Compliance | RoHS; CE pending | | | |
| Drive electronics | Integrated into the smart stage | | | |
| Control interface | Directly via I ² C or SPI interface. Indirectly via USB adapter to PC. | | | |
| Standard Cable Length | 100 mm (90 mm to edge of stage) | | | |
| Maximum Cable Length Note 1: Moving mass of the stage carriage without | 600 mm, > 250 mm requires reduced clock rate | | | |

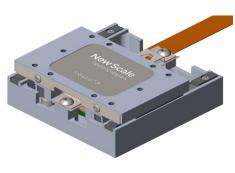


Forward Position

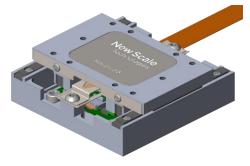

Center Position

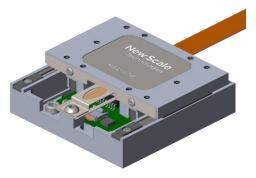

Reverse Position

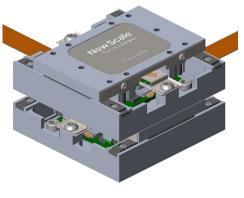

X-Y Assembly (Centered)

Note 1: Moving mass of the stage carriage without payload is ~ 6 grams.

Note 2: Higher mass is possible but will affect performance and lifetime.


Note 3: Torque due to gravity of the payload calculated from center point (see the coordinates in the next page) on the carriage is recommended to be within 1.5 Nmm. Also recommend center of gravity of the payload above the carriage surface to be \leq 15 mm.

Note 4: A <50% duty cycle is recommended for operating at room temperature (25 °C or below) and mounting the stage on a surface with a good thermal conduction path to dissipate heat. Please consult NST for when operating at higher ambient temperatures.

Note 5: Speed and force reduced at lower temperatures within the range.


Note 6: Tested horizontally with random moves, with 20 grams load offset 8.75 mm at reverse position.

| Single Stage Load Capacity M3-LS-U2-8 | | | | |
|---------------------------------------|---|--|--|--|
| Direction | Absolute Maximum Load ⁽¹⁾ | | | |
| Х+ | 2 N | | | |
| Х- | 2 N | | | |
| Y+ | 2 N | | | |
| Y- | 2 N | | | |
| Z+ | 2 N | | | |
| Z- | 10 N | | | |
| θx (+/-) | 10 N-mm | | | |
| θy (+/-) | 10 N-mm | | | |
| θz (+/-) | 10 N-mm | | | |

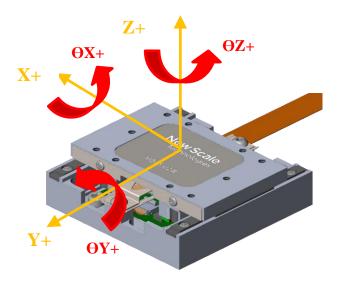


1. Non-operation (without damage)

Single Stage Orientation Definitions

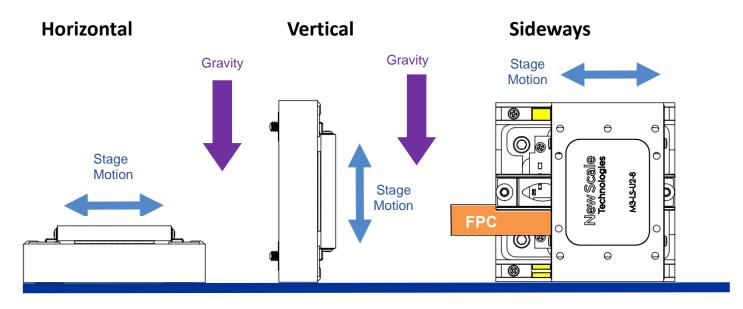



Note: Sideways Orientation Requires Flat Bearing Race Located at Top of Stage (As Pictured Above)




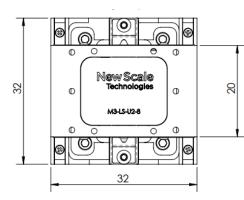

Single Stage Dimensions

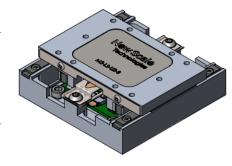

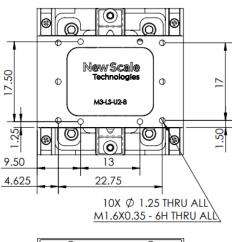




0


ø

4X Ø 1.80 THRU (Clearance for M1.6 Screws)

©-

0






NOTE:

Take Care! Insert screws no greater than 2.6mm (Yellow Exterior Holes)

Screws length up to 5mm may be used in interior carriage holes (Green Holes).

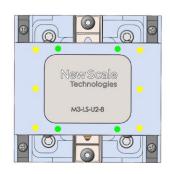

Developer's Kits

17

M3-LS developer's kits provide easy evaluation and prototyping of one-axis M3-LS Linear Smart Stage systems. Developer's kits are available from New Scale and select reps and distributors.

22.75

Contact New Scale regarding additional stages and flex cables for use with the developer's kit to create more complicated systems, or to inquire about volume pricing.

| Developer's Kit | Description |
|-----------------|--|
| DK-M3-LS-U2-8 | M3-LS-U2 Developer's Kit One M3-LS-U2-8 Linear Smart Stage USB-I2C/SPI adaptor PCB Two Straight Flex Cables (100mm & 250 mm) USB Extension Cable (Micro B) External 5V power supply and adaptor (not pictured) Mounting Screws and wrench New Scale Pathway Software Quick Start Guide |



M3-LS-U2-8 Datasheet | 5-20-2024